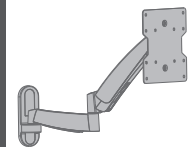

Maintenance
- Check that the bracket is secure and safe to use at regular intervals(at least every three months).
- Please contact your dealer if you have any questions.

MONOPRICE®

Smooth Motion Adjustable Tilting/Swiveling

Wall Mount Bracket

for LCD LED Plasma

23"~42"
5.5~44lbs
CAUTION: DO NOT EXCEED MAXIMUM LISTED WEIGHT CAPACITY, SERIOUS INJURY OR PROPERTY DAMAGE MAY OCCUR!
PID 9744

NOTE: Read the entire instruction manual before you start installation and assembly.

⚠ WARNING

- Do not begin the installation until you have read and understood the instructions and warnings contained in this installation sheet. If you have any question regarding any of the instruction or warning, please contact your local distributor.
- This mounting bracket was designed to be installed and utilized ONLY as specified in this manual. Improper installation of this product may cause damage or serious injury.
- This product should only be installed by someone of good mechanical ability, with basic building experience and fully understanding of this manual.
- Make sure that the supporting surface will safely support the combined load of the equipment and all attached hardware and components.
- If mounting to wood wall studs, make sure that mounting screws are anchored into the center of the studs. The use of a stud finder is highly recommended.
- Always use assistant or mechanical lifting equipment to safely lift and position equipment.
- Tighten screws firmly, but do not over tighten. Over tightening can damage the items, greatly reducing their holding power.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.

Component Checklist

IMPORTANT: Ensure that you have received all parts according to the component checklist prior to installing. If any parts are missing or faulty, telephone your local distributor for a replacement.

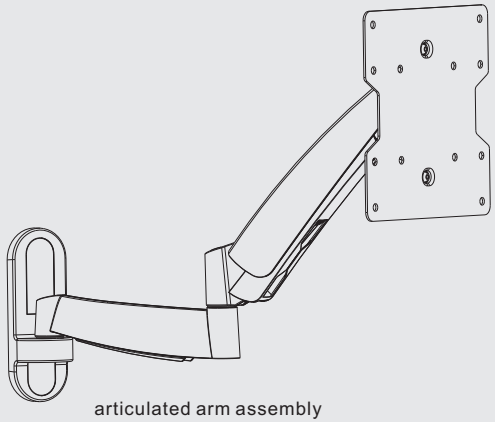

articulated arm assembly
A

3mm Allen key (x1)
B

6mm Allen key (x1)
C

Package M

M4x14 (x4)
M-A

M5x14 (x4)
M-B



M6x14 (x4)
M-C

M8x20 (x4)
M-D

D5 washer (x4)
M-E

D8 washer (x4)
M-F

small spacer (x8)
M-G

Package W



ST6.3x55 (x3)
W-A



concrete anchor (x3)
W-B

1. Separate VESA Plate from Wall Mount

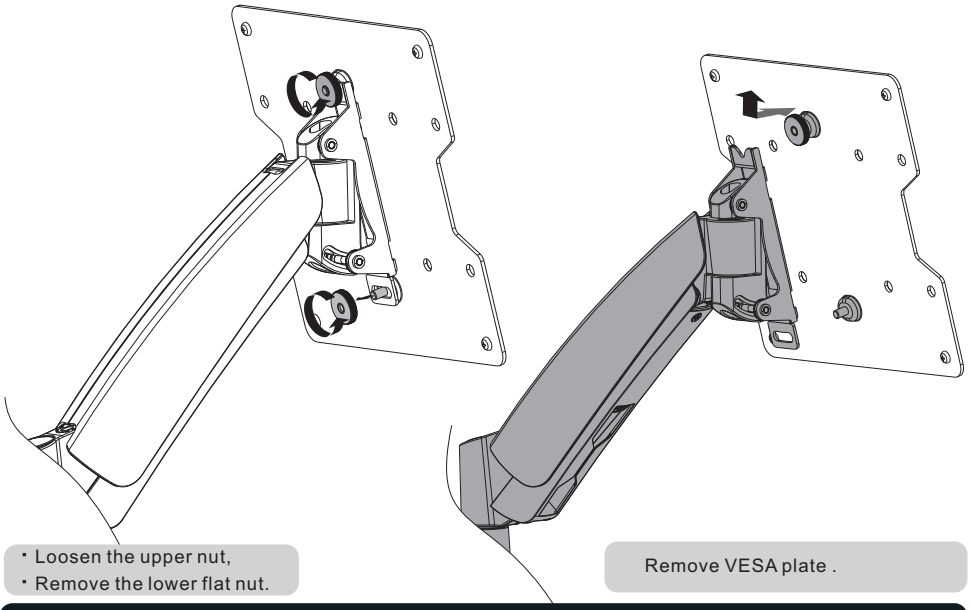

- Loosen the upper nut,
- Remove the lower flat nut.

Remove VESA plate .

2. Remove the Decorative Covers

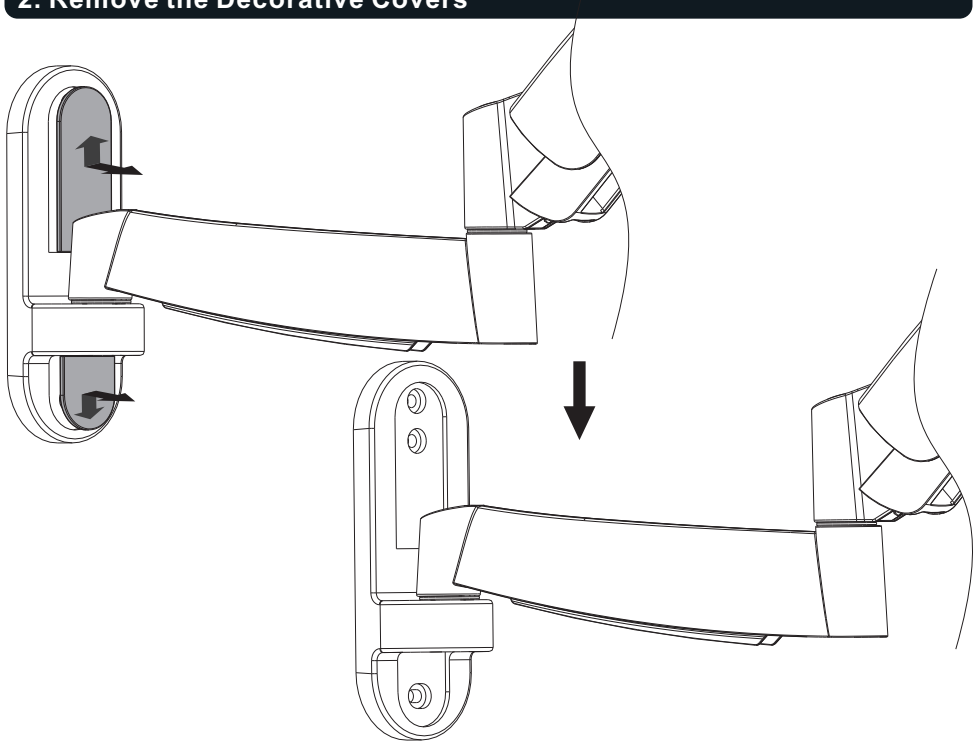

3a. Mount on Wood Stud Wall

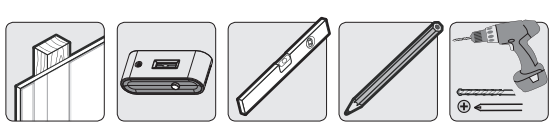





Find and mark the exact location of mounting holes



Drill pilot holes

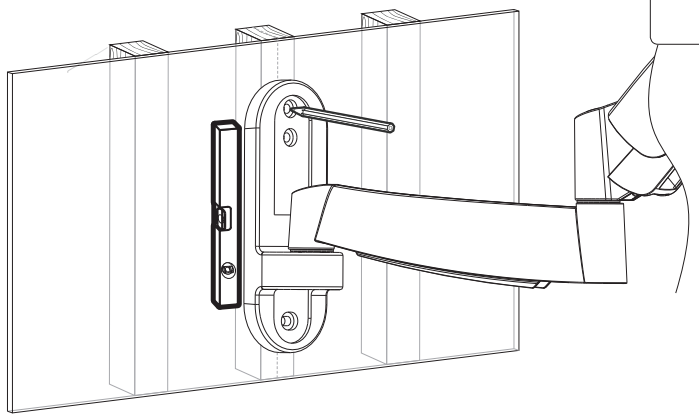



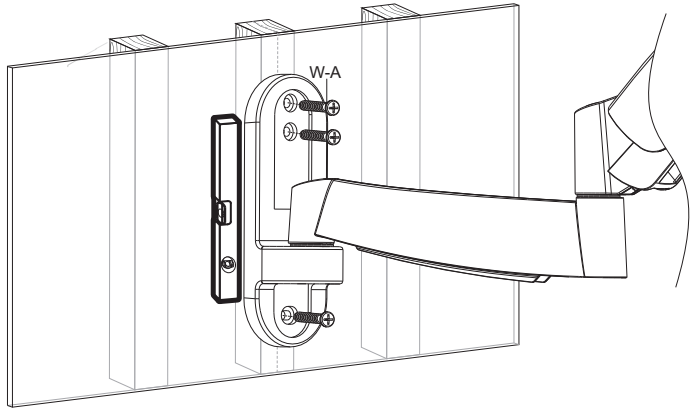

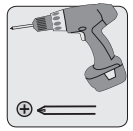

Screw the wall mount onto the wall

⚠ WARNING

- Make sure that mounting screws are anchored into the center of the studs. The use of a stud finder is highly recommended.
- Installers are responsible to provide hardware for other types of mounting situations.
- Installers must verify that the supporting surface will safely support the combined load of the equipment and all attached hardware and components.

3b. Mount on Solid Brick and Concrete Block





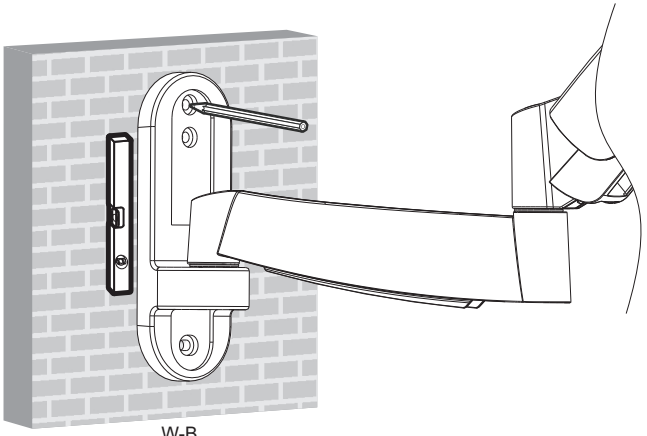



Mark the exact location of mounting holes



Drill pilot holes

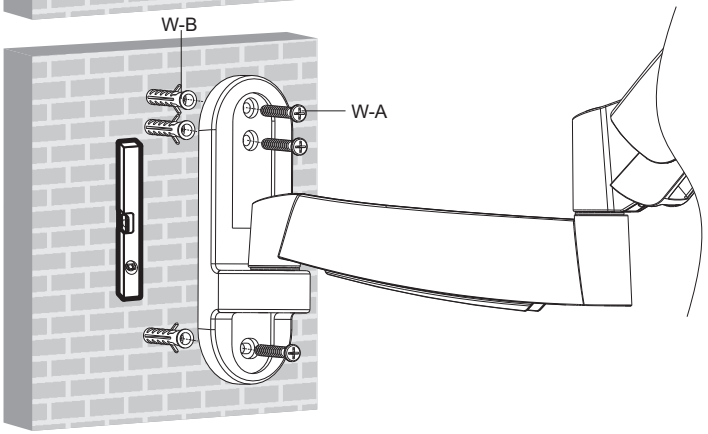



Screw the wall mount onto the wall

⚠ WARNING

- When installing wall mounts on cinder block, verify the actual concrete thickness is at least 1-3/8" (35mm) for using the concrete anchors. Do not drill into mortar joints! Be sure to mount in a solid part of the block, generally 1" (25mm) minimum from the side of the block. It is suggested electric drill on slow setting be used to drill the hole instead of a hammer drill to avoid breaking out the back of the hole when entering a void or cavity.
- Installers must verify that the supporting surface will safely support the combined load of the equipment and all attached hardware and components.

4. Install Decorative Covers

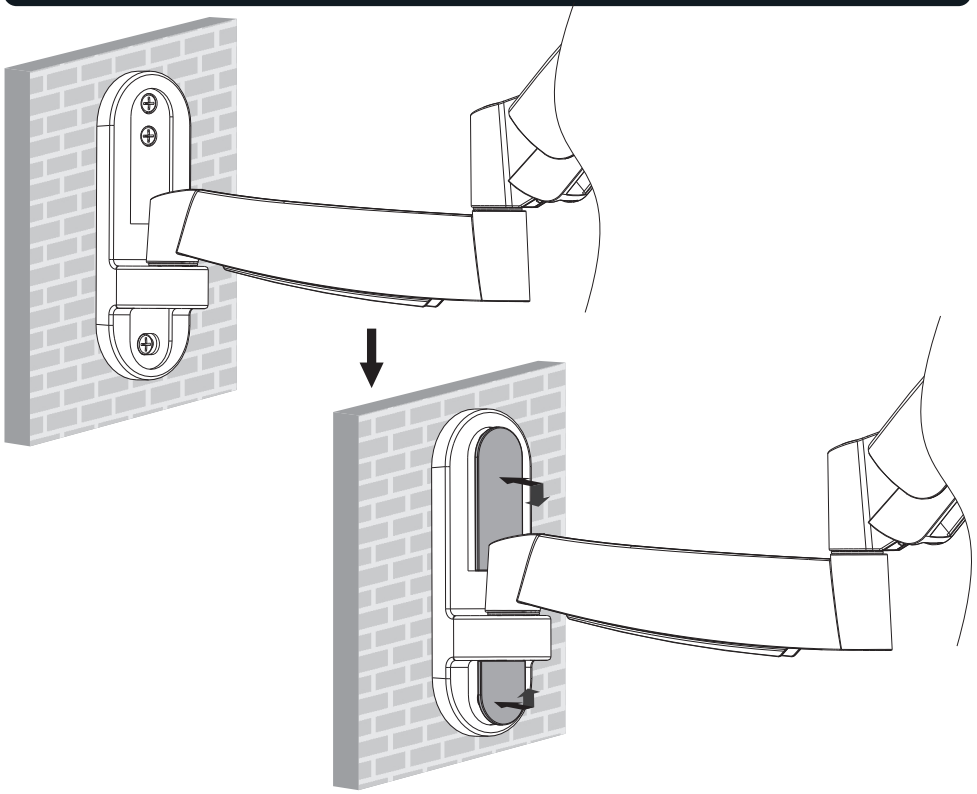

5. Install VESA Plate

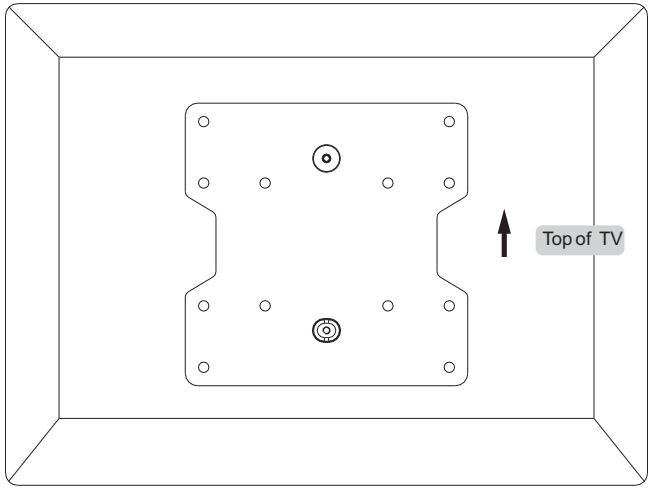

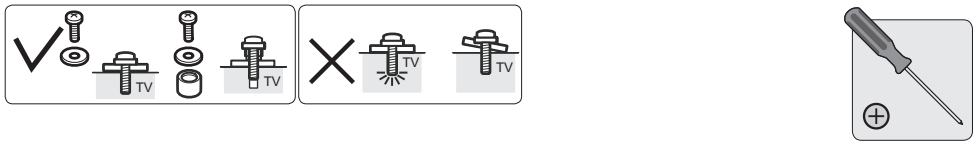

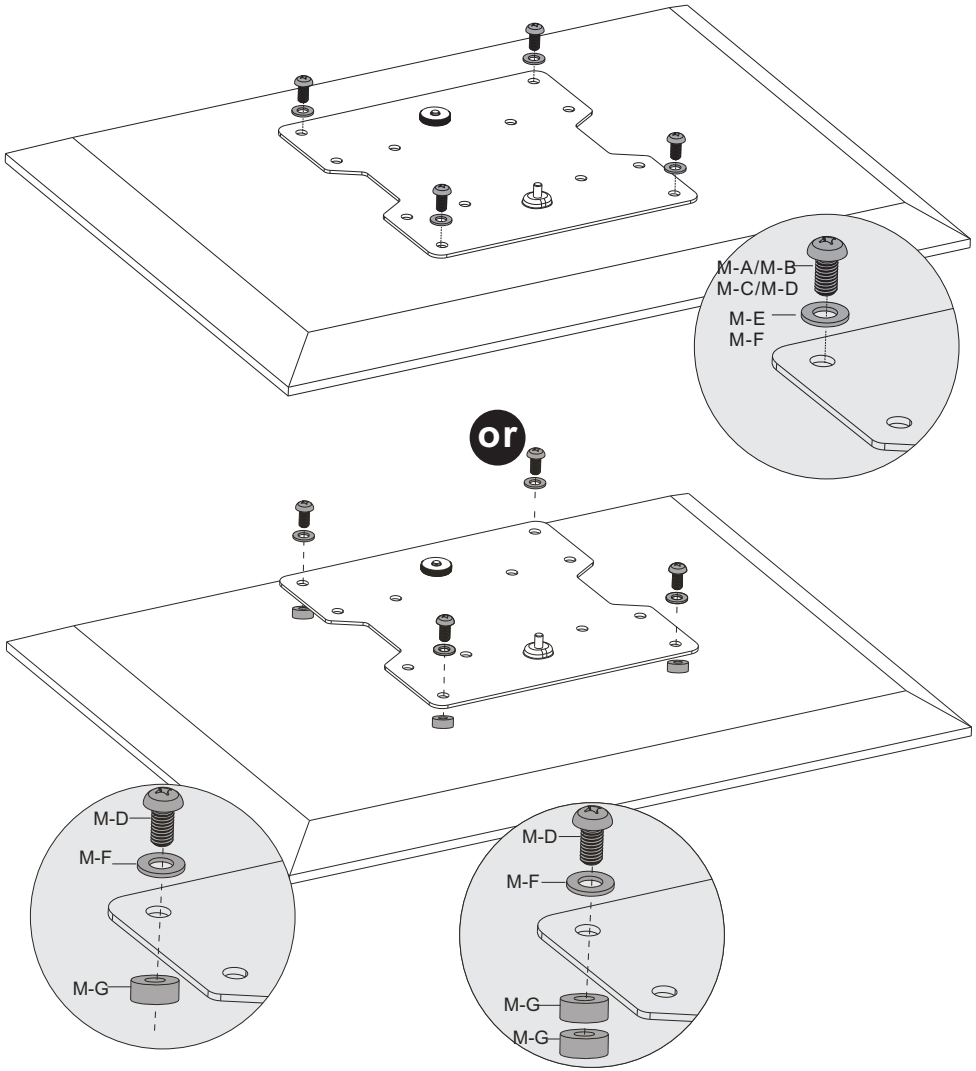

Screw VESA plate onto the TV.

Tighten all screws but do not over tighten.

6. Hook the TV onto the Wall Mount

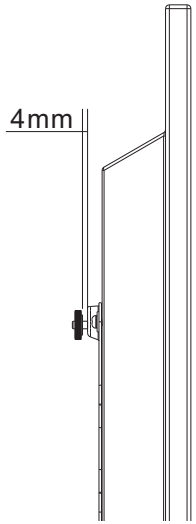

Loosen the upper nut spacing 4mm to VESA plate.

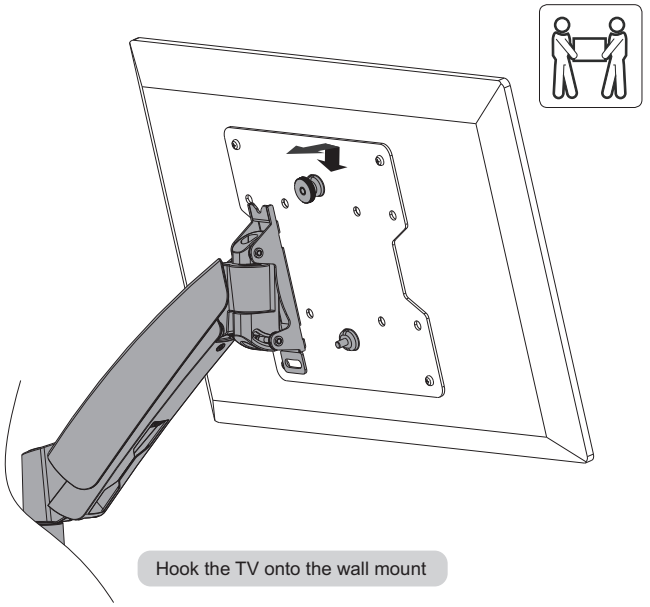

Hook the TV onto the wall mount

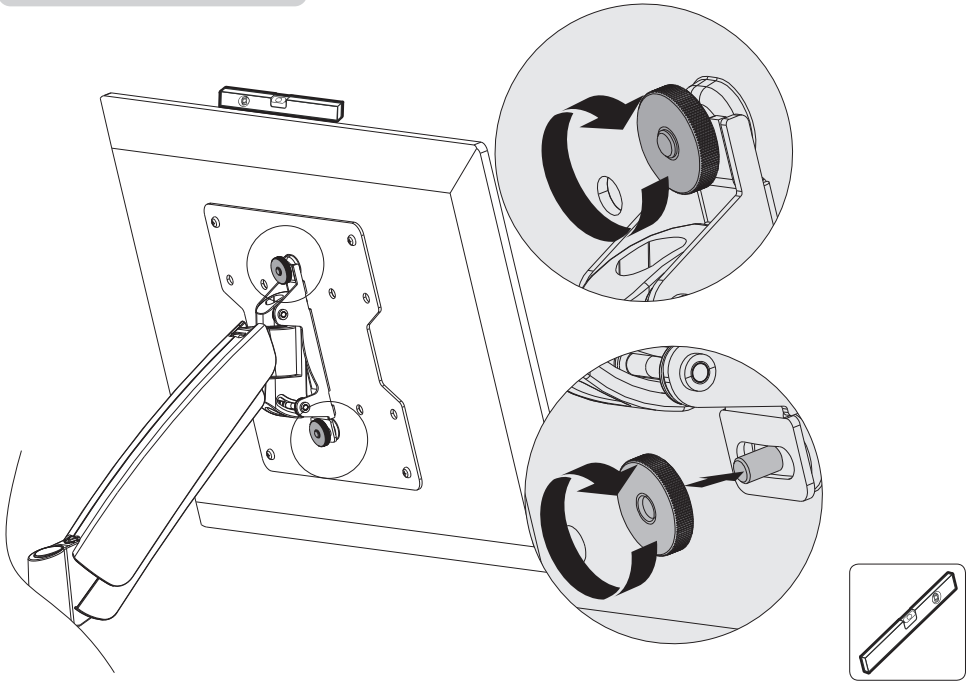

- Level the TV.
- Place the lower flat nut and tighten both nuts.

7. Tension Adjust

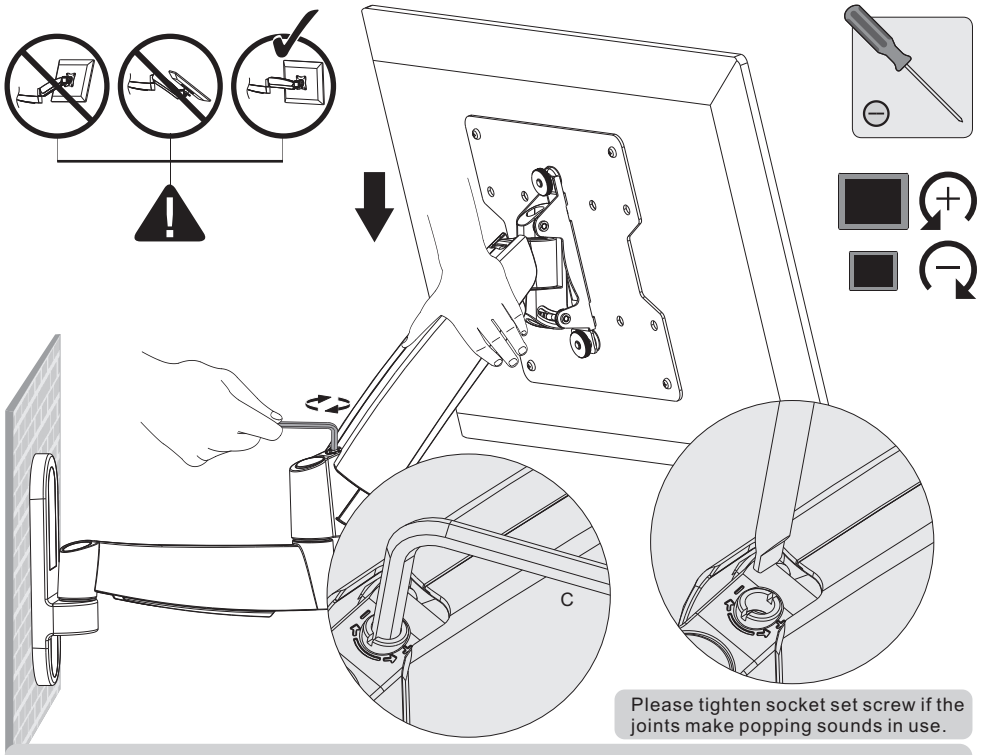

Please tighten socket set screw if the joints make popping sounds in use.

Please keep the arm level during tension adjustment. Use a proper Allen key to slightly loosen or tighten the adjustment screw according to the display weight.

If display settles on its own, rotate adjustment screw towards the "+" symbol.
If display rises on its own, rotate adjustment screw towards the "-" symbol.

8. Cable Management

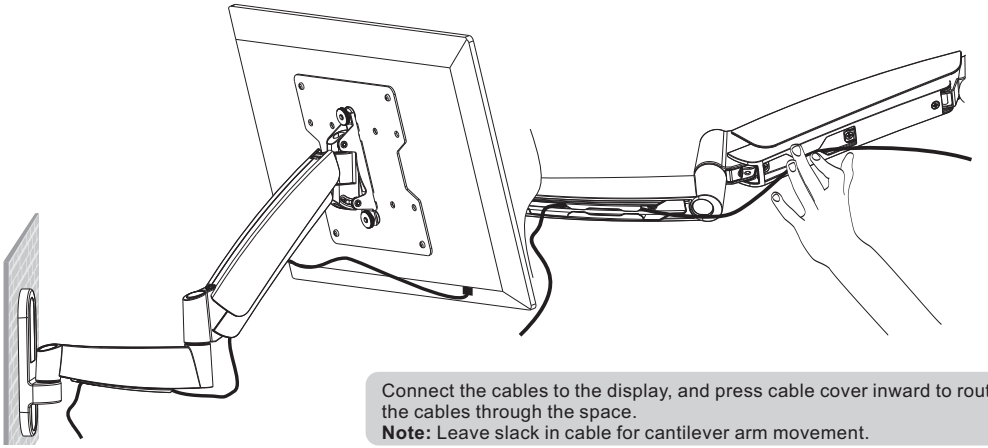

Connect the cables to the display, and press cable cover inward to route the cables through the space.
Note: Leave slack in cable for cantilever arm movement.

9. Adjustment

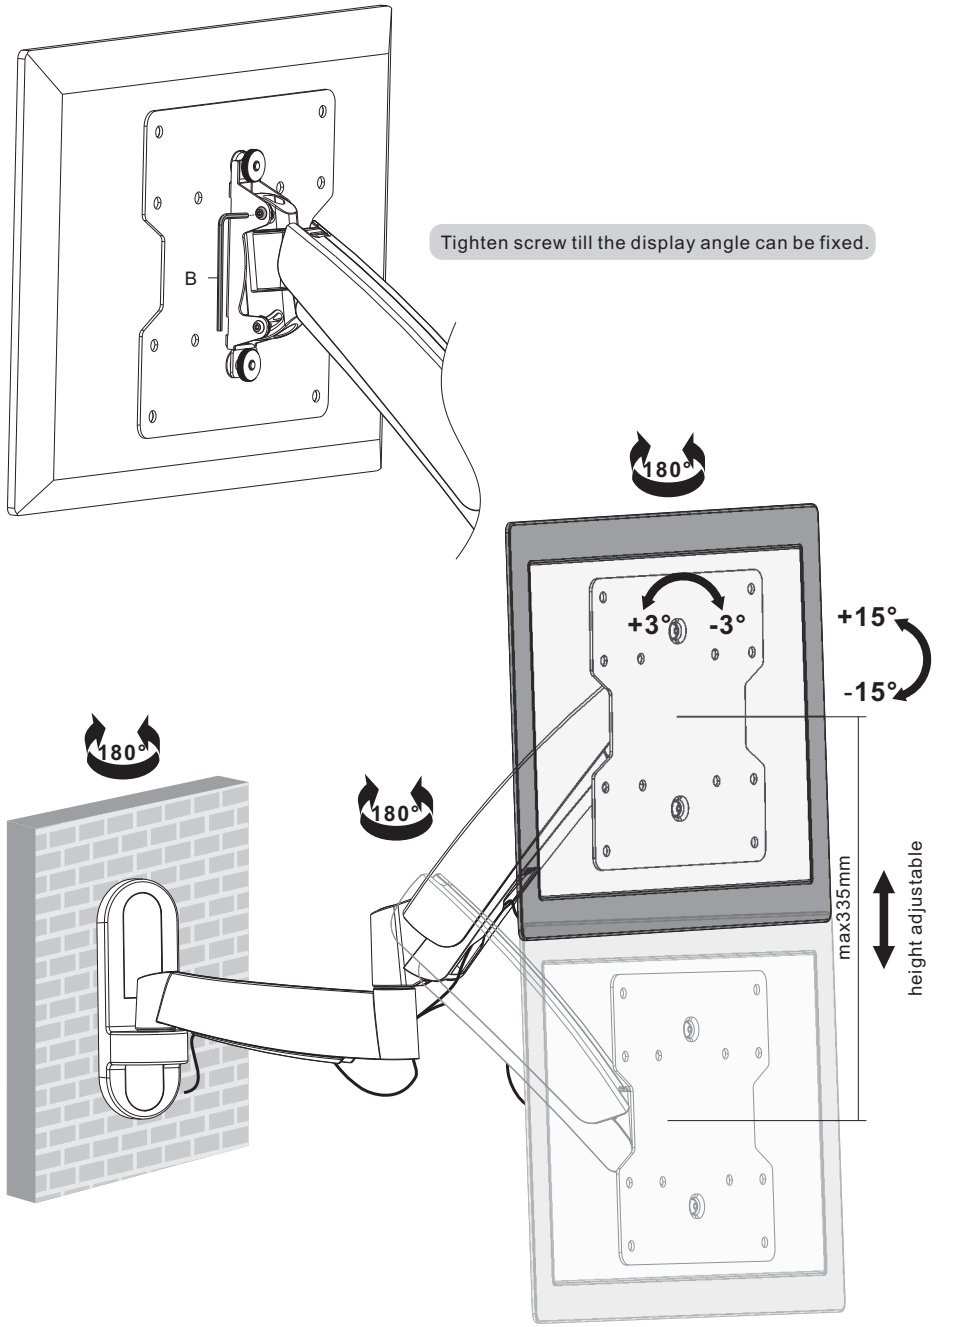

Tighten screw till the display angle can be fixed.

Adjust to the desired location or tilt.